

Models **223x, 224x, 228x**

- Infinitely variable backrest adjustment by gas pressure spring (lying position)
- Individual headrest adjustment (except 2202)
- Swing function (seat and recluse position)
- 360° rotatable

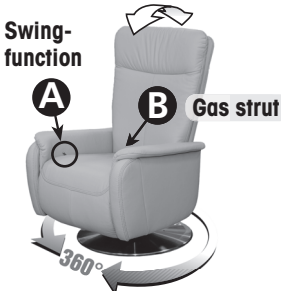


Abb.: Modell Senegal 2235



Dear customer, please make sure before using the TV armchair that no objects (table/wall) or persons can disturb the movement process! The TV armchair is designed for a maximum person **weight of 120 kg**.

3 chair sizes available:

Size	height
S	up to 173 cm
M	174 - 185 cm
L	from 186 cm

Reaching the:

- 1 Relay position (from sitting position)**
 - Make full use of seat depth.
 - Press the upper body against the backrest.
 - Light support on the armrests.
 - Push into the relax position until the footrest is fully extended.


- 2 Lying position (from relay position)**
 - Pull the control lever **B** (left armrest side) backwards.
 - Press the backrest into the desired reclining position.
 - The headrest can be optimally adjusted to the reclining position by moving it.

Seat position (from lying position)

- Pull the control lever **B** (left armrest side) backwards.
- Walk out of the backrest with your upper body.
- Backrest moves automatically to the relax position.
- Press feet on the footrest.
- Armchair automatically moves into the sitting position.

Swinging and lying function

- The swinging motion is triggered by weight shift when the control lever **A** is unlocked.
- Open swing function: Control lever **A** to the front
- Stop swing function: Control lever **A** to the rear
- The seat tilt and position can be selected individually with control lever **A** (only in sitting position).

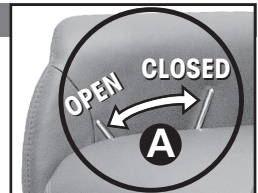

Warning! The **swinging function** is only designed for use in an upright sitting position, so that the swinging can be controlled at any time by contact of the feet with the ground (Fig. 1). The individual seat inclination can only be selected in this sitting position. **The swing function is not possible in the reclining position (Fig. 2) (danger of tipping over!).** Conversion to the **reclining position** may only take place from the upright sitting position (Fig. 3). To do this, the control lever **A** must be in the rear position (CLOSED). When lifting the footrest, the swing function is automatically disabled. After the footrest has been lowered completely, the control lever **A** can be opened (OPEN) and the swing function can be used.



Fig. 1

Danger of tipping!



Fig. 2



Fig. 3